



USER MANUAL

Thank you for purchasing the BESPOKE HEEL CUP for PurrPRO FORMULA PEDALS. It's a bespoke solution for heel cups with side limiters for racers who want their feet placed at fixed position.

Before you start your new sim racing adventure, please read this manual carefully to use our product safely and adjust your pedals according to your needs, so you can get the best possible experience when using PurrPRO FORMULA PEDALS.

1. SAFETY

- The device must not be exposed to rain or humidity in order to avoid risk of fire and the danger of electric shock.
- There is a risk of swallowing small parts of this equipment, so make sure to keep it away from children under the age of 6.
- This product is intended for adults. Do not let your children use it unsupervised.
- Always carefully check that all connections are tightened and assembled in accordance with the manual.
- Due to sharp edges, the equipment should only be used by one person. Keep other people away from the device when in use.
- The product is intended for indoor use only.
- Do not disassemble the product beyond the instructions provided in this manual.
- Never use this device if it is damaged or broken. If something unexpected happens, do not try to fix it yourself. Contact us immediately. Opening and attempting to repair it yourself may be dangerous for the user and will void the warranty.
- Remember to take 5-minute breaks every 20 minutes while playing. Do not exceed 2 hours of play.
- We strongly recommend that you do not drive a vehicle directly after playing a racing simulation game. Take a necessary break and rest.

2. PACKAGE

BESPOKE HEEL CUP 80/100 mm

BOLT COVERS x2

3. INSTALLATION INSTRUCTIONS


1. Remove Active Heel Support carbon plates
2. Unscrew 4 M4x8 bolts
3. Remove ankle carbon plates



4. Remove ankle filler
5. Bring BESPOKE HEEL CUP
6. Place it on top of aluminium base of Active Heel Support



7. Use the same 4 M4x8 bolts to mount the new heel cup.
8. Take BOLT COVERS and place them on top of the bolts in the heel cup.
9. Press them in place with your fingers, they will stay in place by friction between two parts.

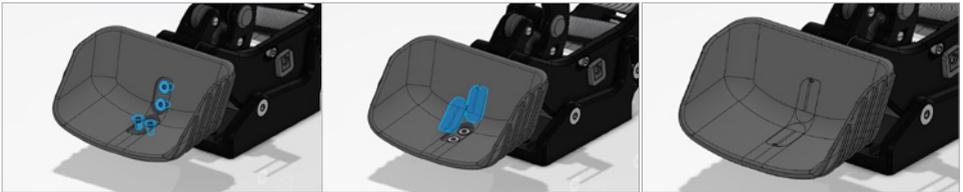

Please use just enough torque to not crack the heel cup mount.

CONGRATULATIONS, you now have upgraded your PurrPRO FORMULA PEDALS with BESPOKE HEEL CUP accessory!



If you encounter assembly issues or need assistance with this manual or our product, please contact us via support@fatblackcat.io or Discord.

Join our discord server! Scan QR code.



Patryk Sokołowski

Jana Skrzetuskiego 6/45

20-628 Lublin, Poland